

# POWERFLEX®

## PART NUMBER

# PFF16-531

## DESCRIPTION

## FIAT 500 ABARTH LOWER TORQUE MOUNT

## INSTALLATION GUIDE

### Contents (parts per pack):

- |                                     |                            |
|-------------------------------------|----------------------------|
| 2 x Polyurethane 16-530A Bushes     | 1 x Stainless Steel Sleeve |
| 2 x Polyurethane 16-530B Bushes     | 1 x PTFE/Silicone Grease   |
| 1 x Anodised Bracket                |                            |
| 1 x Anodised Stainless Steel Sleeve |                            |


Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Raise the vehicle on either a lift or on axle stands to gain access to the underside and plastic engine under tray.
2. Remove the engine under tray to locate the Fiat torque mount.
3. Undo the original bolts to remove the original torque mount.
4. Apply the grease provided to the bore of the Powerflex bushes and outer surface of the sleeves prior to installation. The polyurethane part 16-530B has an offset bore which must be nearer to the inside of the bracket, as shown in figure 1.
5. Install the Powerflex torque mount in the same direction as the OE mount i.e. with the head of the large sleeve gearbox side.
6. Re-fit the original bolts, tightening them to Fiat recommended torque setting.
7. Re-fit the engine under tray using the retained plastic clips and torx screws.

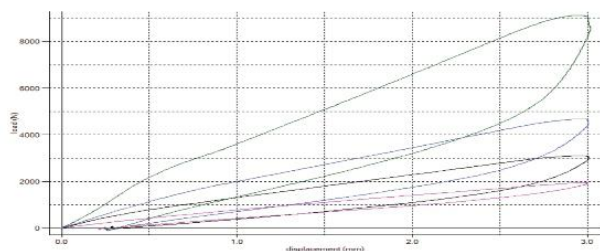

— POWERFLEX YELLOW 70  
— POWERFLEX PURPLE 80  
— POWERFLEX BLACK 95  
— ORIGINAL RUBBER

